


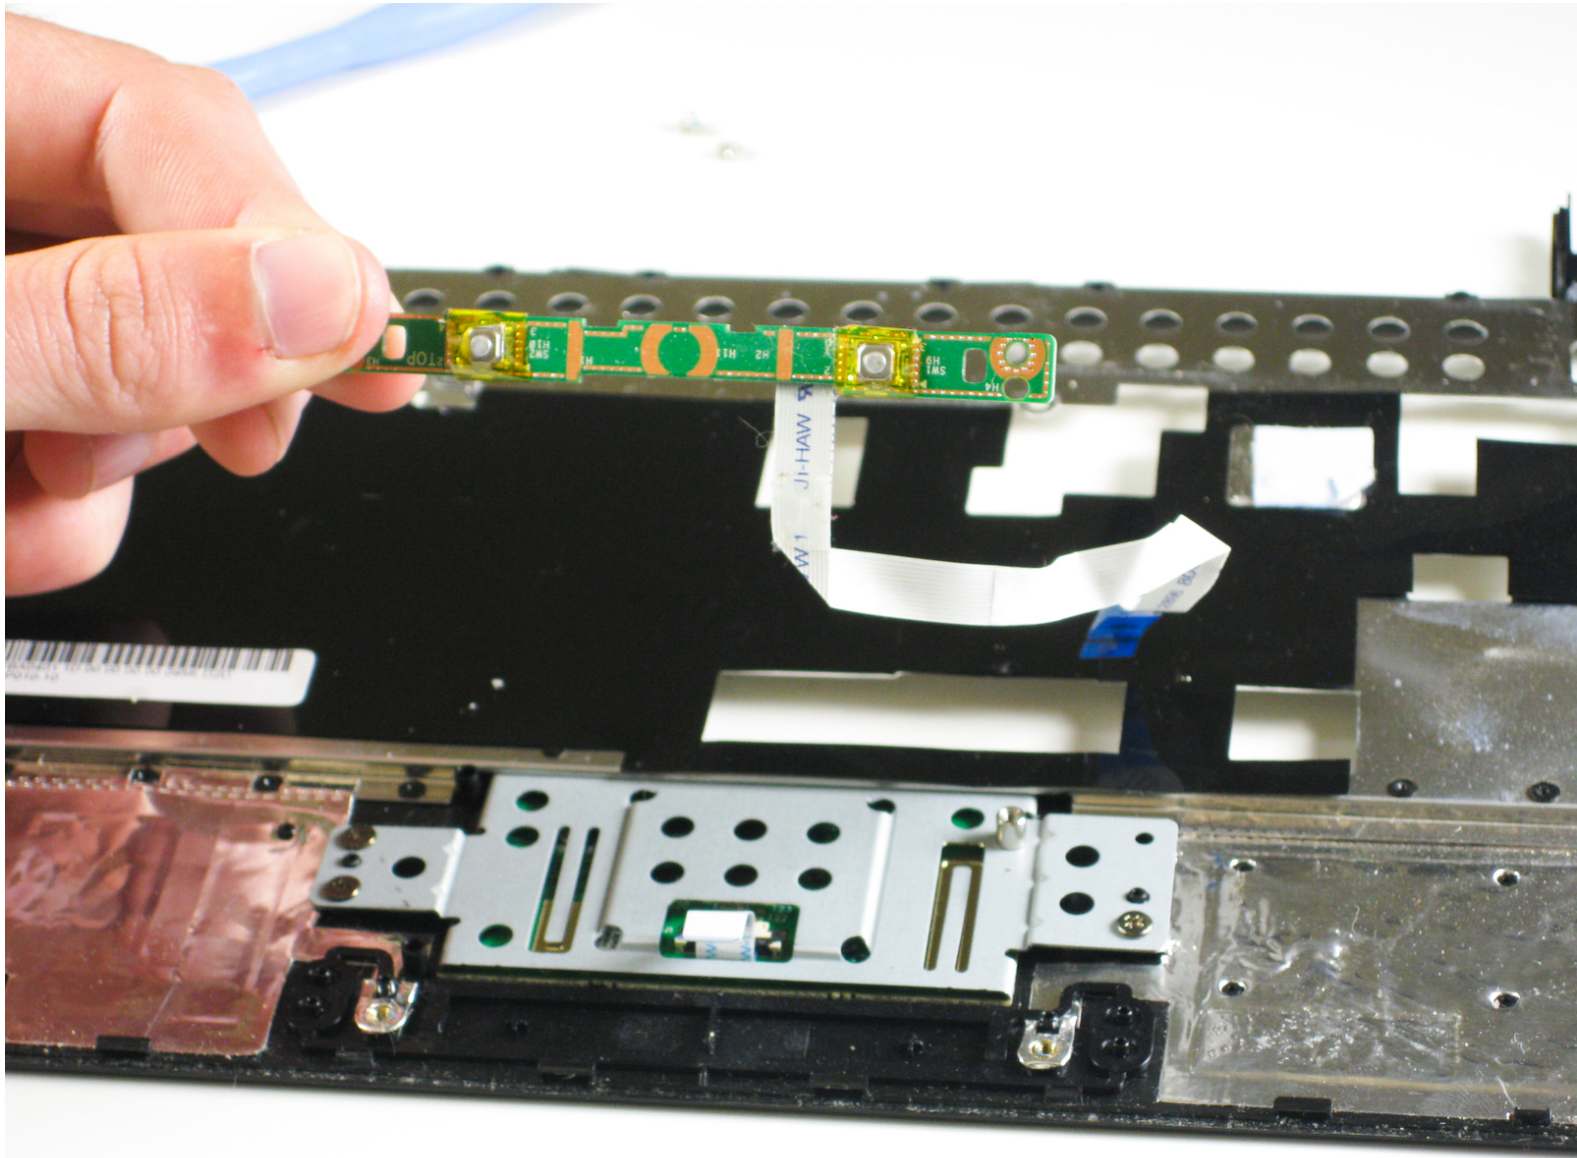

# Asus Eee PC 1005HA Trackpad buttons Replacement

Replace the trackpad buttons on your Asus Eee PC 1005HA.

Written By: Mitchell Cesare



## INTRODUCTION

Use this guide to replace the trackpad buttons in the Asus Eee PC 1005HA.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Lay the laptop upside down.
- Locate the two battery lock tabs.


## Step 2



- Slide the tabs outward to unlock the battery.
- ❗ The left tab will remain unlocked, while the right tab must be held.
- Holding the right tab open, slide the battery out of the laptop.




## Step 3 — Keyboard

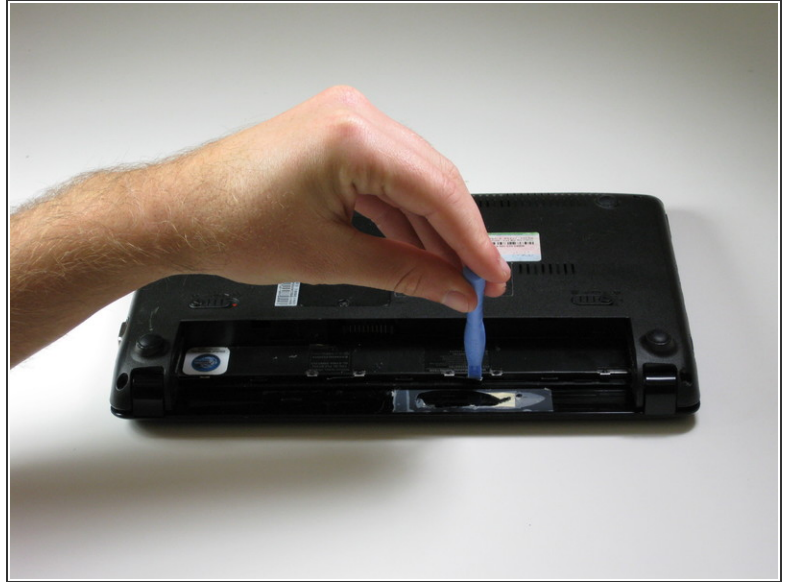

- Use a plastic opening tool to pull out the four metal latches in the battery cavity.

⚠ Do not apply too much pressure to the latches. They cannot be removed, and will bend if forced.

## Step 4

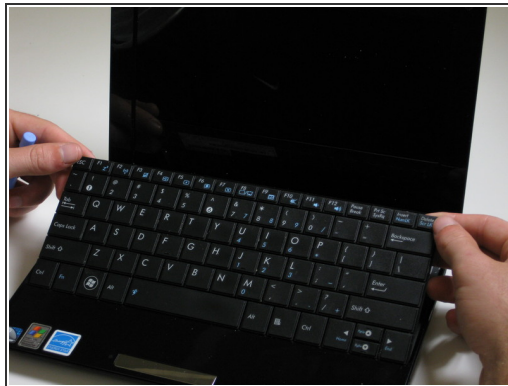


- Flip the laptop over and open the display.
- Use a plastic opening tool to lift the edge of the keyboard nearest the display.
- Gently lift the keyboard and slide it towards the display.

⚠ Do not completely remove the keyboard. A ribbon cable connects the underside of the keyboard to the laptop.



## Step 5

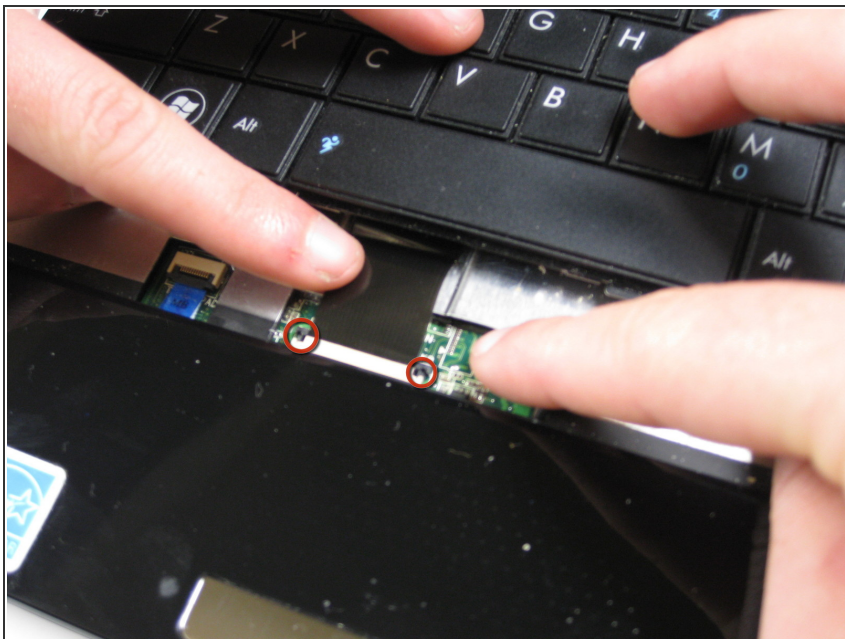

- Using a spudger, release the tabs on the keyboard ribbon cable ZIF connector.
- ⓘ Depending on the variation of this model, the tabs on this ZIF connector will either flip up towards the display or push out towards the display.

## Step 6 — Trackpad buttons



- Close the display and flip the laptop over.
- Remove the five screws on bottom of the case.

## Step 7




- Remove the panel covering the RAM.
  - Pull the two RAM retaining arms away from the center of the RAM chip.
  - Gently pull the RAM chip out of its socket.
- i** This photo shows the battery still attached, but it should be removed prior to removing or replacing the RAM.

## Step 8



- Remove the single 6.65 mm screw next to the RAM socket.


## Step 9

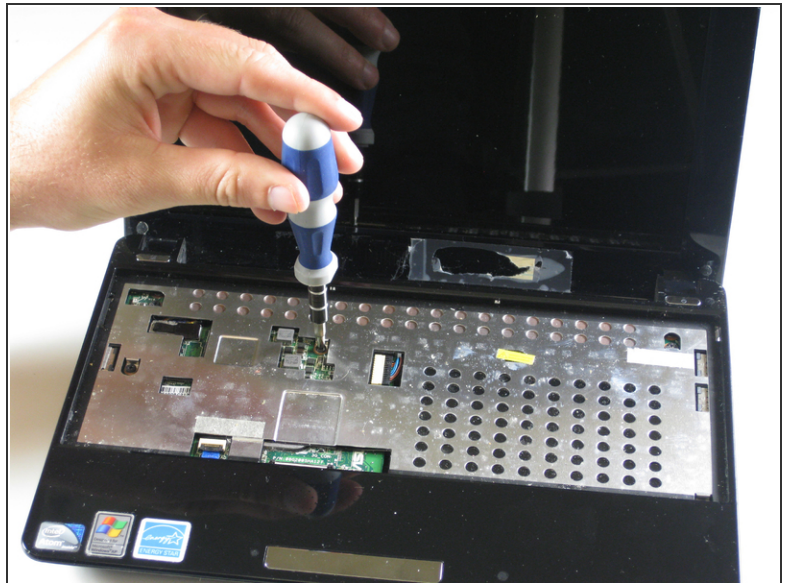

- Flip the laptop back over and open the display.
- Remove the six 5.5 mm screws from the metal plate beneath the keyboard.



## Step 10

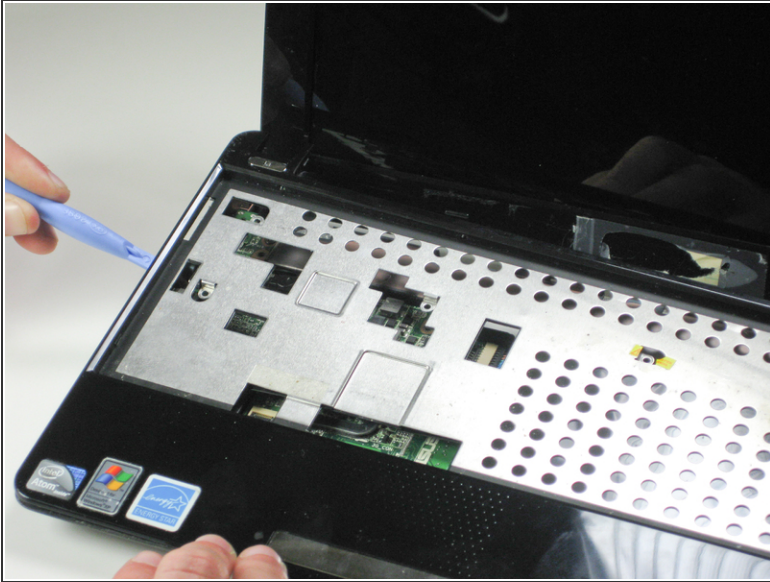


- Using a plastic opening tool, detach the five plastic clips securing the upper case.

⚠ There are two small LEDs in the top edge of the lower casing, near the bottom right of the laptop. Be careful not to damage them as you pry open the plastic clips.




- Carefully lift the upper case and flip it towards the front of the laptop.

## Step 11

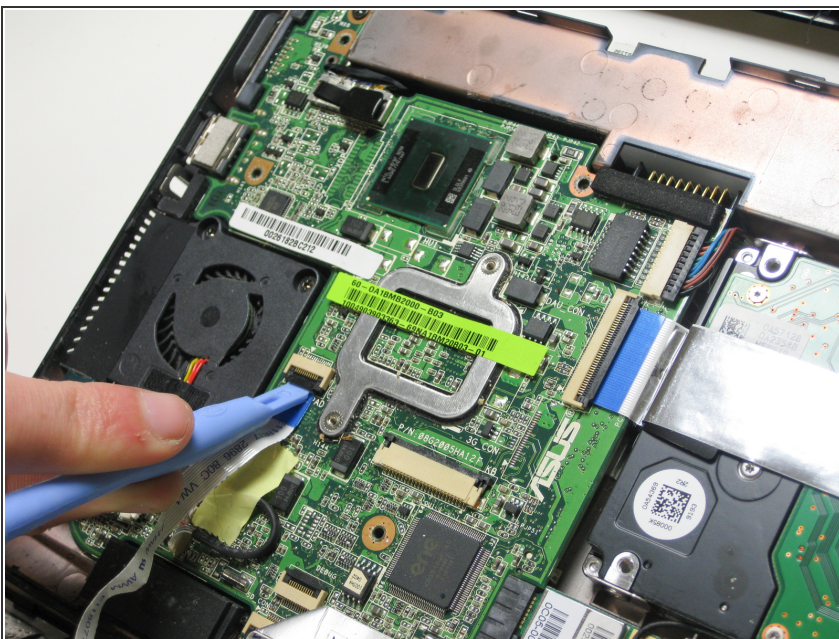


- Flip up the retaining flap on the trackpad ribbon cable ZIF connector.
- Slide the trackpad ribbon cable from its socket.

## Step 12

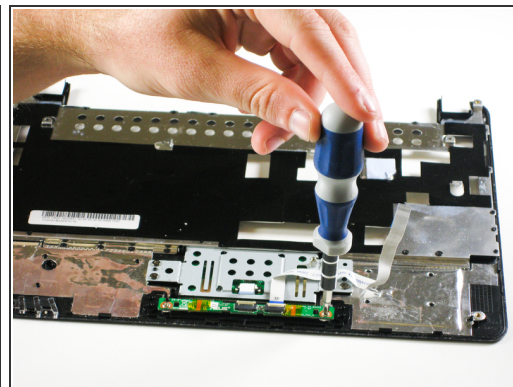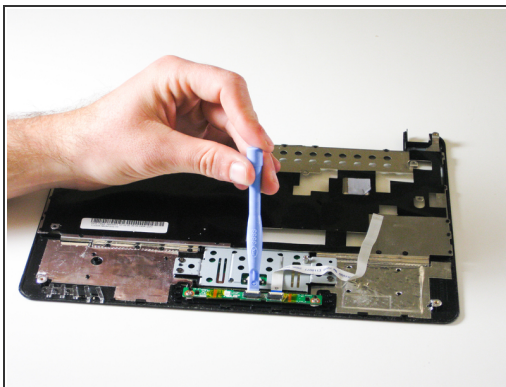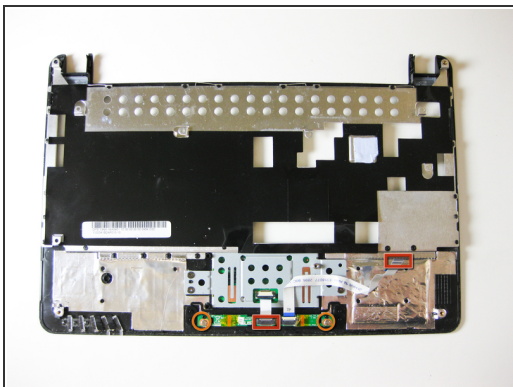

- Flip up the retaining flap on the button ribbon cable ZIF connector.
- Pull the button ribbon cable out of its socket.
- Remove the two 3.6 mm screws from the button assembly.

## Step 13

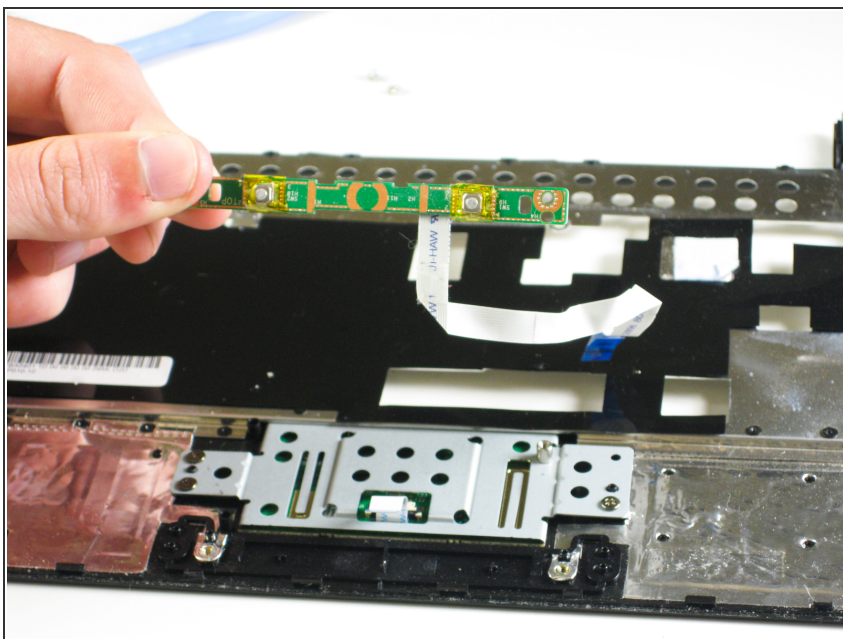

- Remove the trackpad buttons.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 03:29:53 AM.